

Installation Guide:

Woven Wood Shades

Cordless | Continuous Cord Loop | Motorization




Installation
Inside Mount



Installation
Outside Mount


HARDWARE AND PARTS INCLUDED

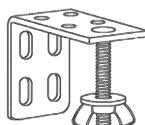

BRACKET WITH
WINGNUT



TENSION DEVICE
(CONTINUOUS CORD LOOP)

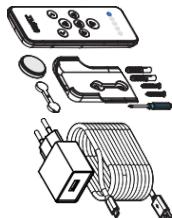

REMOTE AND CHARGER
(MOTORIZATION)



WALL ANCHORS*



SCREWS

*Recommended if mounting into hollow drywall.

TOOLS REQUIRED



PENCIL



 
TAPE MEASURE



POWER DRILL



5/64" DRILL BIT



PHILLIPS SCREWDRIVER



PHILLIPS DRILL BIT




LEVEL



STEP LADDER


Quick pointers

- 1 These shades have pre-drilled holes in the top of the headrail. You will use these holes as a guide for your bracket placement.
- 2 If you use your own screws instead of those provided, be sure to pre-drill a small hole with a 5/64" drill bit before the final screws go in to attach brackets.
- 3 If you're using wall anchors, pre-drill with a 1/4" drill bit instead, then tap the wall anchors in place before drilling in the screws.

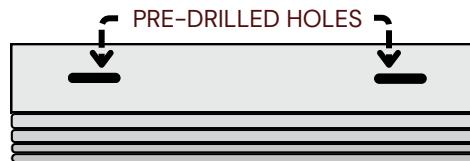

1 2 3
LEVEL 1 INSTALLATION

INSIDE MOUNT

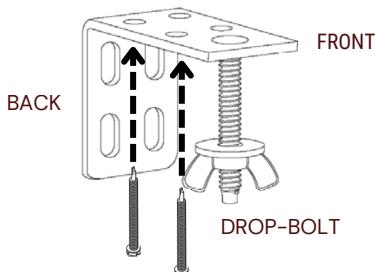

1

Hold the shade up to the top of the window and line the front up to make it flush with the wall. Hold the shade in place and make a mark through each hole in the headrail. Set the shade aside.


2

Take a bracket and center the drop-bolt over each mark. Use the holes in the top of the bracket to mark screw placement.

3

Align the brackets with the holes, and use a Phillips drill bit to install the screws.

OUTSIDE MOUNT

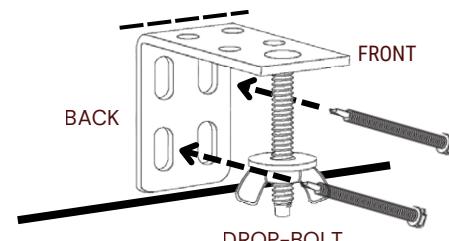

1

Center and hold the headrail at least two inches above the window. While keeping the shade level, make a small line with your pencil just above each of the pre-drilled holes in the headrail. Set the shade aside.

2

Align the top edge of a bracket along each mark, and use the holes in the back of the bracket to mark screw placement.



3

Align the brackets with the holes, and use a Phillips drill bit to install the screws.

ATTACHING THE SHADE

1

Remove the wingnuts from the brackets if you haven't done so already.

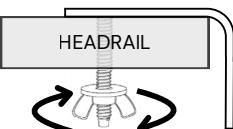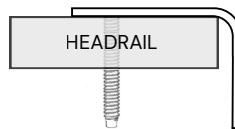

2

With the front of the shade facing you, fit the pre-drilled holes of the headrail to each of the drop-bolts on the brackets. While holding the headrail to the brackets with one hand, use your other hand to attach each of the wingnuts to the drop-bolts. Tighten the wingnuts until the shade is firmly held in place.


INSTALLING THE TENSIONER

Continuous Cord Loop Only


1 First install the bracket to the side of the window opening for Inside mount, or to the wall just outside of the window for Outside Mount.





2 Press the two buttons on the outside of the tension device, then pull down the screw hole lock using a pencil or pen.

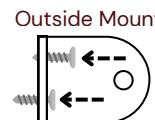

3 With the screw hole lock moved down, place a screw in the hole.

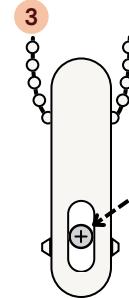

4 Line the screw up with the "nub" on the bracket (on the rounded side of the bracket) and then insert the screw and tighten it. Test to ensure the cord is loose enough for operation, but tight enough for safety.

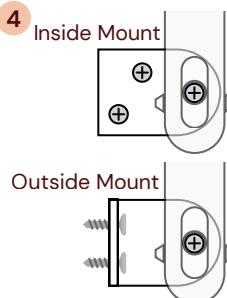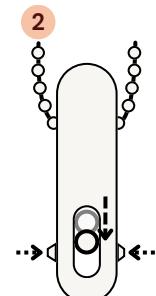


CLEANING INSTRUCTIONS

For regular maintenance, use a duster or a vacuum with a brush attachment and run it over the front and back of the shade.



 CHILD SAFETY WARNING



Corded window blinds and shades can be a strangulation risk or cause serious injury to young children and pets. When using corded window treatments, use the following tips to keep them safe:

• NEVER place a crib by a window!

- Move furniture that children can climb on away from the window.
- Always use cord cleats with corded products.

- Secure child-safe tensioners for continuous cord loop chains to the wall or window encasement.
- Keep cords up and away from your child's reach.


PROGRAMMING AND USING THE REMOTE

Motorization Only


Quick pointers

The Motorized Shades are pre-programmed and arrive in Sleep Mode. Please wake the motor before attempting pairing and operation. These also will arrive with only 30% charge for safety reasons, so you may need to charge the product fully before first use.

Press and Hold the Setting Button for 6 Seconds until you hear the motor move and the lights on it flash red 4 times.

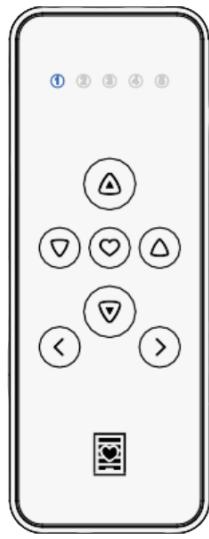

5-Channel Remote

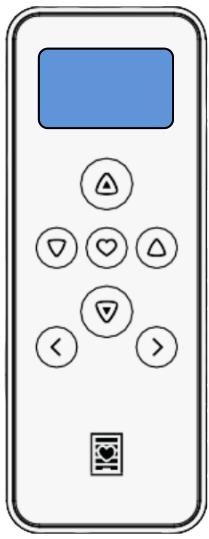

15-Channel Remote



Back of Remote



Battery Cover



Raise/Lower




Slowly Raise/Lower



Stop/Favorite



Channel Previous/Next

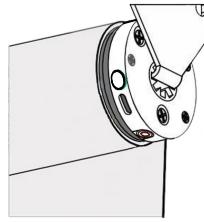

Motor Head

PAIRING THE REMOTE



- 1 Select the desired channel.
- 2 Remove the battery cover by unscrewing the tiny screw and sliding it off.
- 3 Hold the Setting Button on the motor until the shade moves up and down (this is called a Jog) and the light blinks green.
- 4 Hold the Setting Button again until the shade beeps and the motor light blinks red.
- 5 While the motor beeps, press the "C" button on the remote. The shade will jog to confirm.

REMOVING A SHADE FROM A CHANNEL

- 1 Select the desired channel.
- 2 Remove the battery cover by unscrewing the tiny screw and sliding it off.
- 3 Press the "C" button quickly 3 times. The shade will jog and blink green to confirm.

SETTING AND REMOVING THE FAVORITE POSITION

Setting the Favorite

- 1 Set the shade to the desired Favorite Position.
- 2 Remove the battery cover by unscrewing the tiny screw and sliding it off.
- 3 Press and hold the "L" Button, then quickly press and hold the Heart Button. The shade will beep and blink green to confirm.

Removing the Favorite

- 1 Press the Heart button to move the shade to the Favorite Position.
- 2 Follow steps 2-3 above to remove the shade's favorite.
- 3 Repeat steps for setting the Favorite Position above to set the new Favorite Position.

Change Motor Speed

- 1 Ensure the remote is on the channel desired.
- 2 Hold the Heart button, then press the Up Button quickly. The Green light on the shade will blink confirmation.

3 Speeds: Standard, Comfort and Slow.


Changing the Battery

- 1 Unscrew the small screw on the back battery cover and slide it off.
- 2 Remove the old battery, and then install the new one with the Numbers and + sign facing up. Make sure it clips into the socket.
- 3 Slide the battery cover back on and tighten the screw to secure it.

INSTALLING THE REMOTE'S WALL MOUNT

Optional

- 1 Find a spot where you would like to place the remote mount.
- 2 Mark where you will drill the screws and install the optional anchors. Screw the screws through the holes.
- 3 After they're installed, insert the cap over the screws.

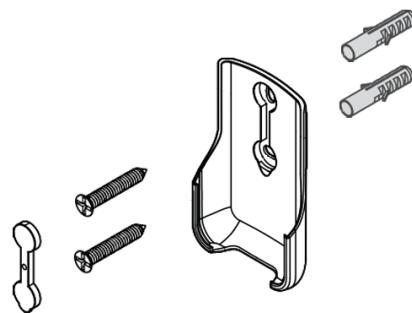

TUSS SMARTVIEW APP

Downloading and Accessing the App

- 1 Search for the Tuiss SmartView app in the App Store or Google Play Store or Scan the QR code on the front of the swing label attached to your shades.
- 2 Open the app and follow the steps to Create an Account.
- 3 Tap Continue. When you open the app for the first time, you'll be asked by SmartView to use your phone's Bluetooth. Enable this and then continue.




Waking the Shade

Quick pointers

Wake the motor up by pressing and holding the Setting Button on the motor for 6 seconds. The light will flash 4 times. If you've already woken the motor to add the remote, you can skip this step.

Adding the Shade

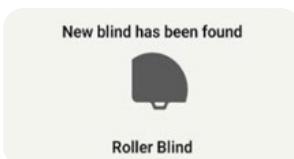

- 1 Select "Add my first Blind". Scan the QR code on the Back of the swing label.
- 2 The blind will jog or move up and down briefly to acknowledge pairing.
- 3 Press "Found it!" and it will jog to confirm pairing.
- 4 Press Save, then Done if you have no further shades. If you want to add another, select "Add new Blind"

Operation



Selecting Open will move the shade to the top limit and Close to the bottom limit.

All shades assigned to the same room will move simultaneously.


To move individual shades, press the "Select blinds" option and then tick the box for the shade you'd like to use.

Drag the shade up or down to precisely position your shade.

CLICK2FIT INSTALLATION


Installation and Removal

- 1 Hold the Click2Fit up against the top of window opening and make it flush with the window opening. Push the lever upwards until you hear the rail click in place.
- 2 Should you need to remove the Click2Fit headrail, uninstall the shade from the headrail. Use a flat-head screwdriver to unlatch the lever. Make sure to hold the headrail while unlatching the lever and cushion the lever as it unlatches. This will prevent damage to the window and headrail.

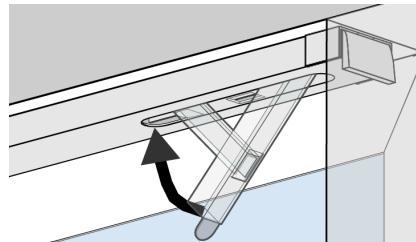

Optional Metal Plate

- 1 Uninstall the shade from the Click2Fit headrail. Pull the lever from below to retract the tension block.
- 2 Peel the adhesive tape off of the back of the metal strip and attach it with the tabs at the bottom.

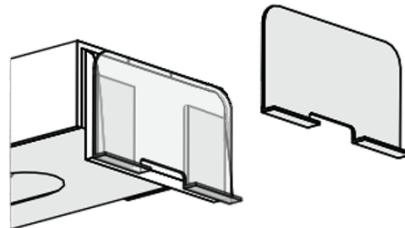

BUILT-IN CLICK2FIT INSTALLATION

The Built-In Click2Fit will already be attached inside the product. Please don't attempt to remove it to ensure the product operates correctly.