



Palladian Shelf

Install Guide

TOOLS NEEDED

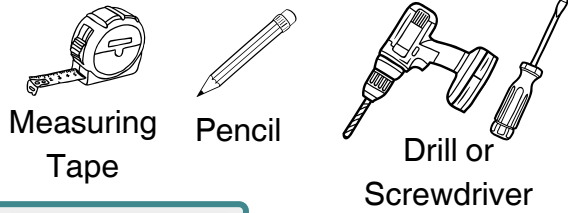

PARTS INCLUDED

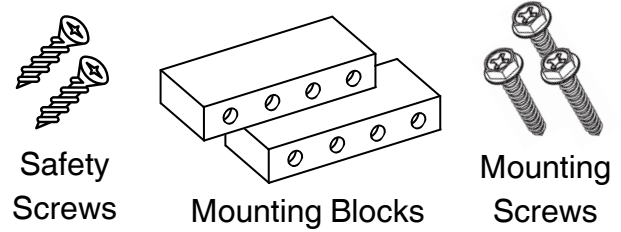


OPTIONAL



A Level

Installation





Inside Mount

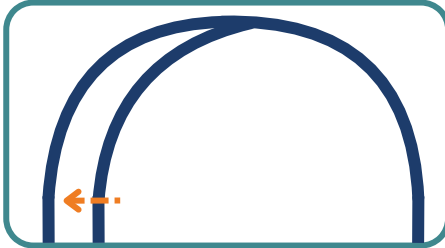

Measure the top of the flat part of each side of the window (This should be the point just below where it starts to curve).



Note: The mounting blocks need to be parallel to install the shelf properly.

Measure $\frac{3}{4}$ " below that mark and make another mark. Ensure the line is level and mark the location of the first screw $1\frac{1}{4}$ " back from the front of the window opening. Make a second mark $1\frac{1}{2}$ " back from that.

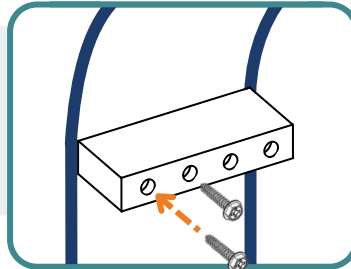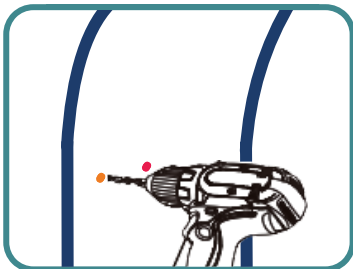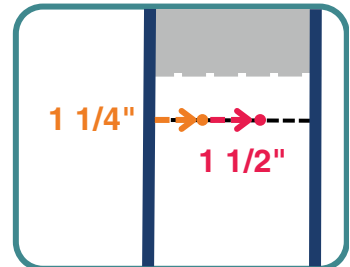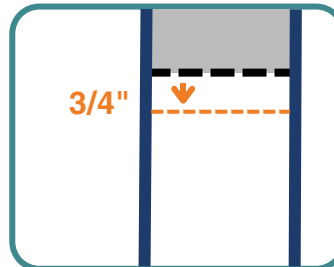

Predrill your holes, then mount the block to the wall.

Slide the shelf on, then mount the safety screws on the underside using the predrilled holes. This will provide a secure mount and keep the shelf from sliding off.

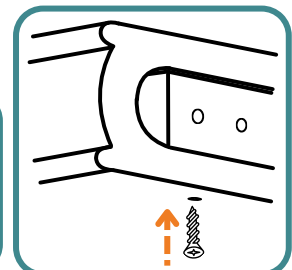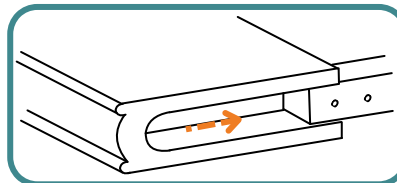

Congratulations! You've just installed your Palladian Shelf!