Measuring Guide

Charleston, Dallas Retro, Houstonian, Mesa
New Yorker, San Francisco, Santa Fe, Savannah

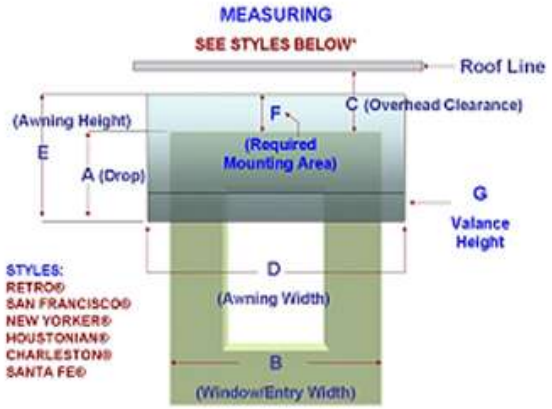

Valance Height (included in measurements)
Residential = 6" & 7"
Commercial = 8" & 10"

MEASURING REQUIREMENTS

- F - **4"** Minimum Mounting Space Required Above Window or In-swinging Door.
- A - **0"** Maximum Drop Over Out-Swinging Door (for awnings less than 3' deep)
- A - **10"** Maximum Drop Over Out-Swinging Door (For awnings 3' deep or greater)
- A - Except for entries with out-swinging doors, the drop is a personal preference.
  Hint: The greater the drop = more energy savings but less interior light.
- C - For entries with low overhead clearance (low roof lines) please see items designated "Low Roof Line Entry Awning"
- D - Every awning is 4.5" wider than the window/door size it is representing (B). This is for mounting purposes. (Example: 3' San Francisco® is actually 40.5" wide)
- G - Valance Height (Residential = **6", 7"** / Commercial = **8", 10"**)
- E - Height measurements INCLUDE valance in the measurements for all awnings.