


Green Luxury Cellular Shades

Install Guide - Standard Cordless - Top Down Bottom Up - Day/Night

PARTS INCLUDED



Mounting Bracket
18" - 48" = x2
49" - 96" = x3




Large Screw
18" - 48" = x4
49" - 96" = x6




Lift Handle
18" - 48" = x1
49" - 96" = x2


TOOLS NEEDED

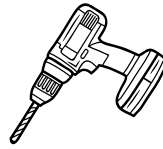

Drill or Screwdriver

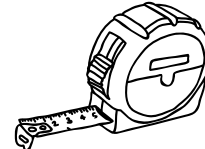

Measuring Tape

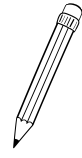

Pencil




This is a Level 1 Install.

Installation

Clip the brackets onto the headrail about 5" from the end of the headrail on each side.

For products that are over 48" wide, ensure you place a bracket towards the center of the blind and then evenly space the two outer brackets.


Be careful to not mount over any obstructions inside the headrail.

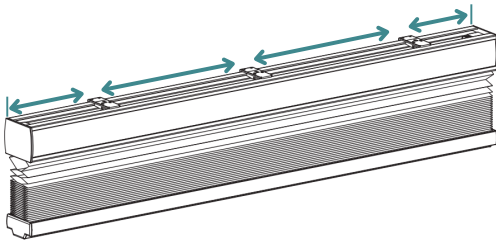

Inside Mount

With the brackets clipped in, hold the product up to the top of the inside of the window opening, then mark where the bracket will be placed.

Remove the brackets from the product and then hold them up to where you placed your first marks then mark the holes where you'll drill.

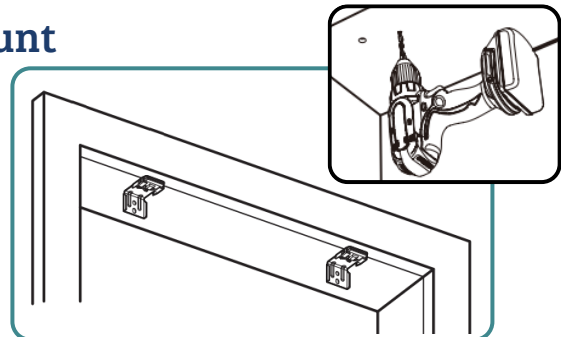


Predrill through your marks.

Outside Mount

With the brackets clipped in, hold the product up above the top of the inside of the window opening, then mark where the bracket will be placed.

Remove the brackets from the product and then hold them up to where you placed your first marks then mark the holes where you'll drill.

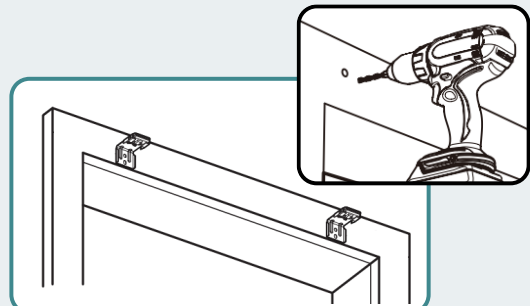


Predrill through your marks.


Green Luxury Cellular Shades

Install Guide - Standard Cordless - Top Down Bottom Up - Day/Night

Inside Mount

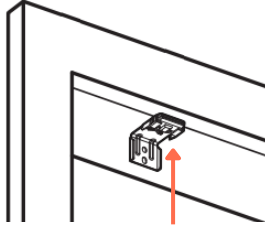


Outside Mount

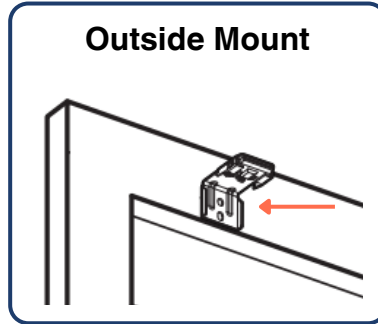

Install the brackets into their respective positions using the Large Screws.


For Both Mount Types - Installing Onto the Brackets

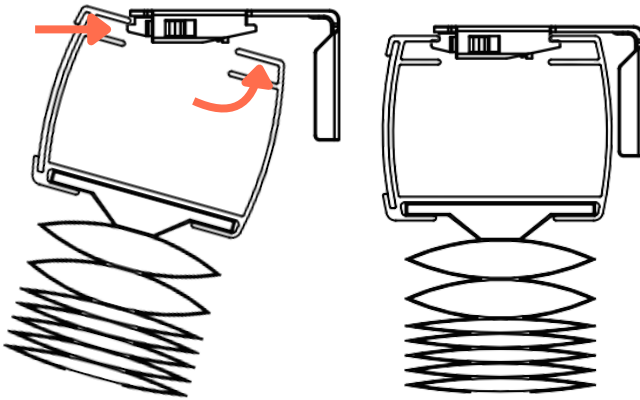

Hook front lip of the headrail onto the front of the bracket. Tilt the back up while pushing towards the window opening with the front of the shade. You'll hear a click once it's locked in.


For Both Mount Types - Installing the Handle

For the last step, hook the top of the handle on the top of the bottom rail. While hooked onto the top, rotate the handle down, and you will hear a click as it snaps into place.

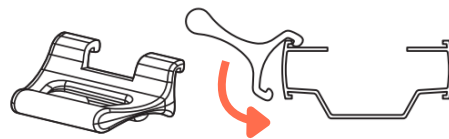

Optional - Installing the Hold Down Bracket

Clip in the hold down bracket and position the shade at the point where you'd like it to be held. Mark the spot where the hold down bracket is and then predrill holes for the screws. Install the screws and then clip the hold down bracket in.

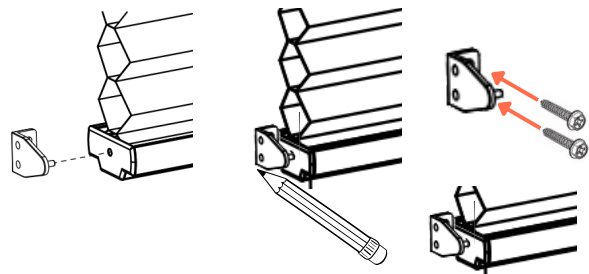

Cleaning: The vinyl headrail and bottom rail can be wiped clean with a damp sponge. To clean the shade fabric, use a feather duster or vacuum lightly using a soft brush attachment.