


# Stick2Fit Cellular Shades

## Install Guide

### TOOLS NEEDED



Measuring  
Tape




Pencil



Wash Cloth or  
Included Wipe

### OPTIONAL



A Level




This is a Level 1 Install.

*No additional tools or brackets are required.*


## Installation

Clean the Surface that you plan on mounting the shade to. This will ensure that the adhesive on the headrail has a firm grip on the wall and will stay in place.

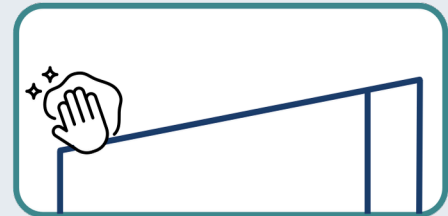

### Pro Tips:

**Make sure the surface is flat to ensure the strongest hold.  
Allow 2 weeks for paint to fully dry/cure**

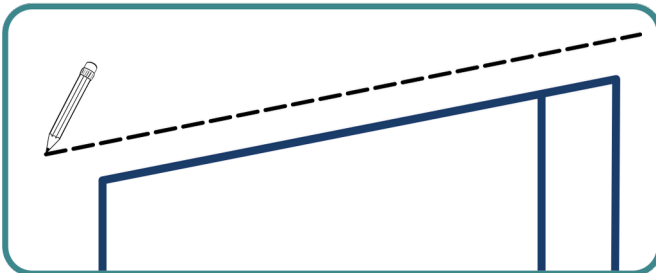


Using the pencil, make a straight line at least 1 1/8" above the window opening. If you want to ensure the product will hang and operate evenly, use a Level to ensure the line is straight.

The adhesive is **very strong**, so be extra sure you have the spot fully wiped and ready before install.

Peel off the adhesive from the back of the shade's headrail. Make sure not to get anything stuck to it before you place it on the wall.

**Only peel the adhesive when you're ready to install**

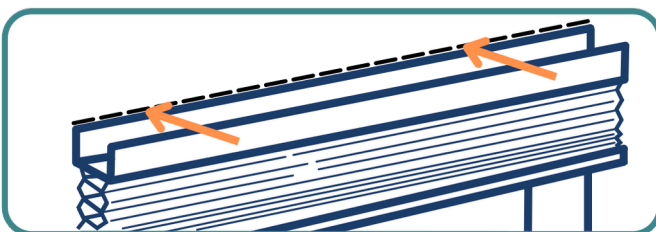

Turn the shade around and press firmly to mount it onto the wall just below the line marked earlier.

**Please allow 24 hours for the adhesive to fully set.**

Test out the shade and ensure smooth operation.  
Congratulations, you've installed your Stick2Fit Cellular Shades!