


2" Cordless Faux Wood Blind Installation Instructions

Please follow these Installation Instructions


Revised 12/14/17

You will need a pencil, tape measure, drill, screwdriver, pliers, and appropriate fasteners.


Step 1: Choose the Correct Fastener

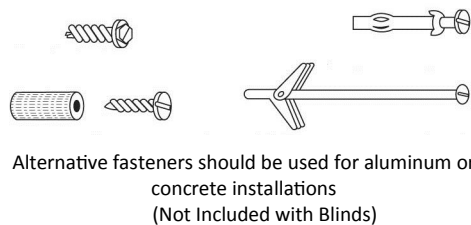

Step 2: Prepare Brackets

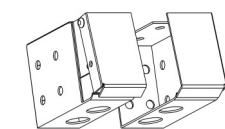

End Box
Installation Brackets

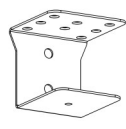


Center Support
Bracket

Use the following # of Center Support Installation Brackets based on the Blind Width:

Up to 24"	24 1/4" - 36"	36 1/2" - 60"	Greater than 60"
0	1	2	3

Prepare box brackets for installation:

Open the front of the bracket by pressing on the bottom of the bracket to release the locking tab while lifting the front gate.

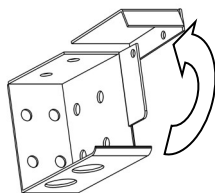

Valance Clips Needed


Up to 47.99"	48" - 71.99"	72" - 95.99"	96" - 119.99"	120" +
2	3	4	5	6

For your convenience, extra valance clips are included.

Step 3: Mark the Bracket Locations


(For Outside Mount Installations)

Position the box brackets at each end of the headrail. When using a single center support bracket, center it between the box brackets. For more than one center support bracket, space the support brackets evenly, not more than 30" apart. Make sure the brackets will not interfere with the cord mechanism or any other internal parts. Mark the bracket for mounting hole locations, making sure they are square and equally spaced. For outside mount installations, use a level to check for levelness.

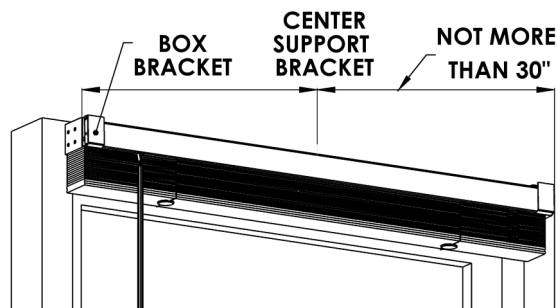

(For Inside Mount Installations)


Position the box brackets at each end of the headrail. Depending on the installation location, box brackets can be attached using the top, back, or side holes. When using a single center support bracket, center it between the box brackets. For more than one center support bracket, space the support brackets evenly, not more than 30" apart. Make sure the brackets will not interfere with the cord mechanism or any other parts. Mark the location of the desired bracket mounting holes, making sure that they are square and equally spaced.

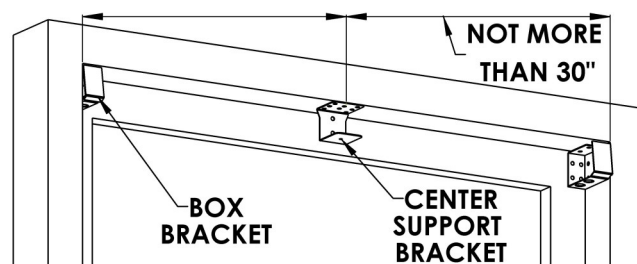


2" Cordless Faux Wood Blind Installation Instructions

Step 4: Bracket Installation

(For Outside Mount Installations)
Screw brackets into wall as shown.

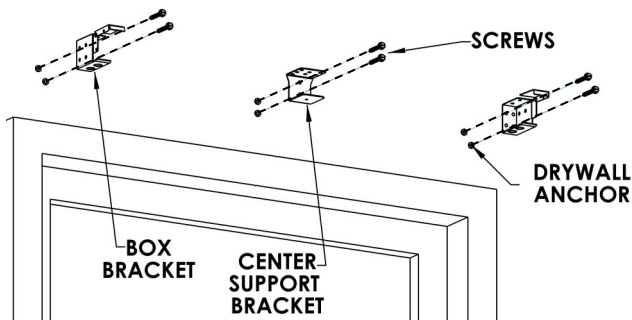


(For Inside Mount Installations)
Screw brackets in window frame as shown.

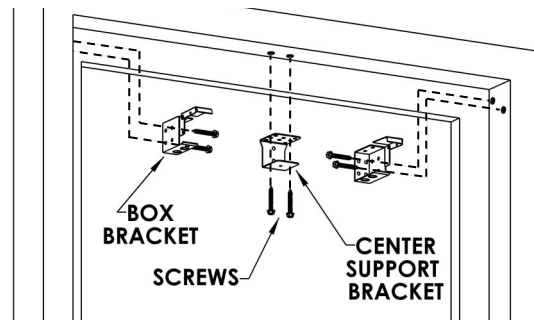

Step 5: Valance Installation

Step 1. If your blind has pre-installed magnetic valance clips – simply secure the valance to the steel headrail. If not, press the slot in the valance against the bottom post of the valance clip (Step 1) and rotate it upward.


Step 2. Push the Valance against the Valance Clip. The two parts should snap together.

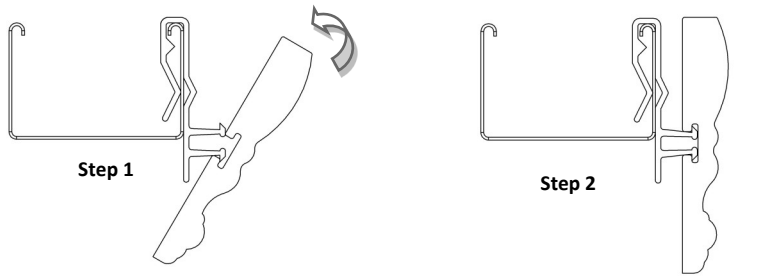


2" Cordless Faux Wood Blinds Installation Instructions

Step 6: Blind Installation

Align the headrail with the center support and box brackets. The headrail should have the tilt mechanism facing toward the room. Be careful not to trap the top slat in the brackets and slide the headrail straight back until it is snug in the brackets. If the headrail can slide from side to side in the box brackets, you can use a flat head screwdriver to bend out the tabs on the end of the until it is snug.

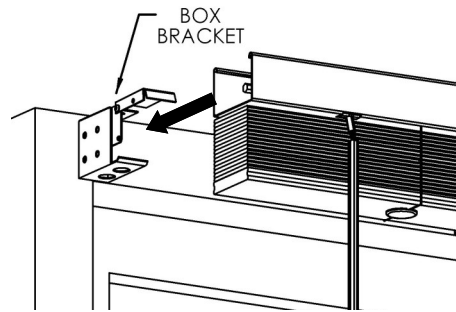

Lower the front gate of each box bracket and press until the locking tab clicks into place.

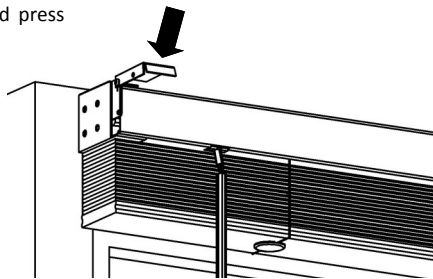

Operating Instructions:

To lower the blind, pull down on the bottom rail with one hand gripping it near the middle or with both hands grabbing the bottom rail at the equal distance from the center. When released shade will stay in place at desired height.

To raise the blind, push up on the bottom rail near the center to reach desire height. Once released, shade will stay in place.

To tilt the blind, turn the tilter wand in either direction.