


## **Installation Instructions - Cassette**


Read the instructions carefully before assembling and using the product. Assembling process can be completed by non-professionals. For indoor use only.


# **△ WARNING**


- Young children can strangle in the loop of pull cords, chains and tapes, and cords that operate window coverings.
- To avoid strangulation and entanglement, keep cords out of the reach of young children.
   Cords may become wrapped around a child's neck
- Move beds, cots and furniture away from window covering cords.
- Do not tie cords together.
  Make sure cords do not twist together and form a loop.

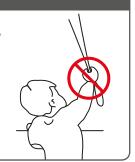





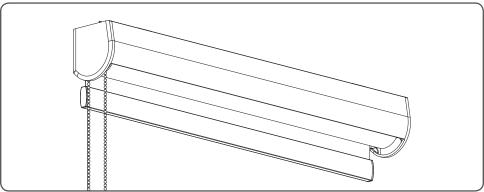


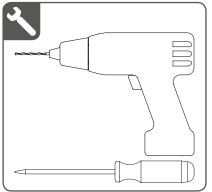


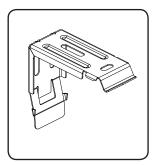

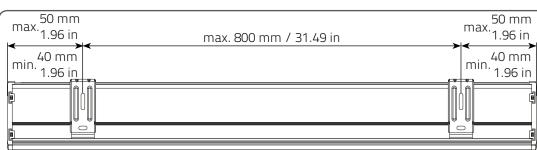

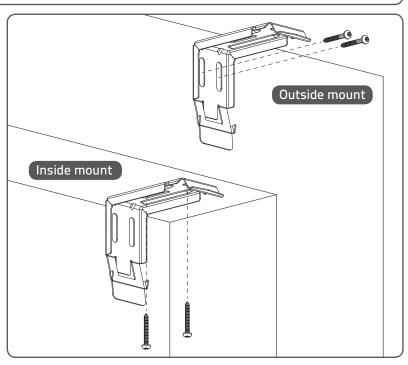


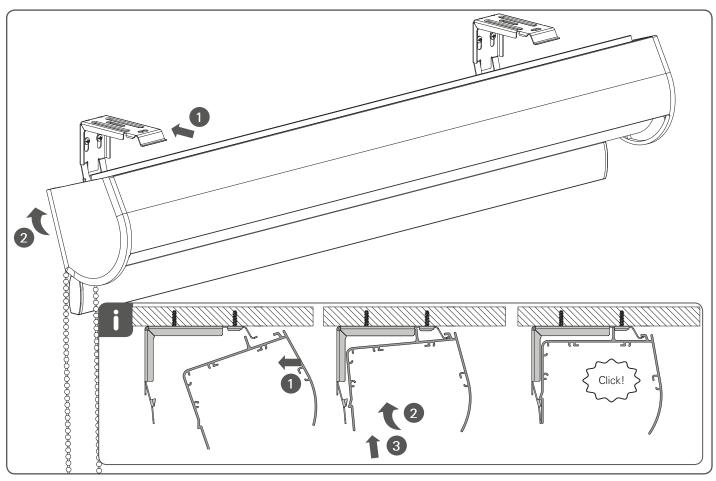

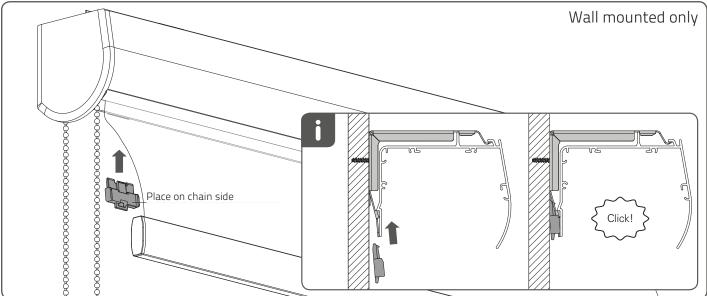

# Install the child safety device as specified in the childsafe manual.

# Removal

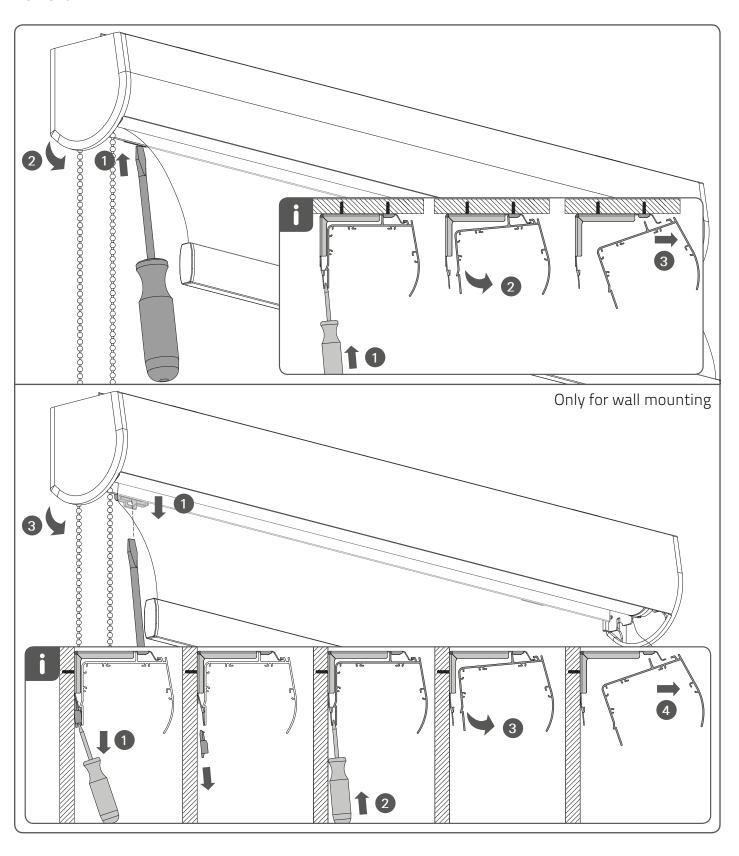




# **INSTALLATION INSTRUCTIONS - STANDARD BRACKETS**

### Installation


Read the instructions carefully before assembling and using the product. Assembling process can be completed by non-professionals. For indoor use only.


# **△ WARNING**


- Young children can strangle in the loop of pull cords, chains and tapes, and cords that operate window coverings.
- To avoid strangulation and entanglement, keep cords out of the reach of young children.
   Cords may become wrapped around a child's neck
- Move beds, cots and furniture away from window covering cords.
- Do not tie cords together.
  Make sure cords do not twist together and form a loop.

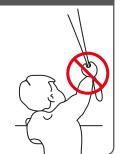




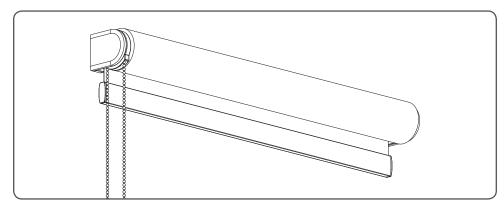


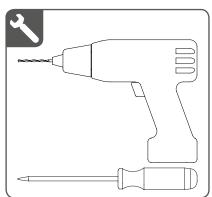


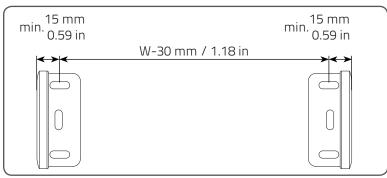

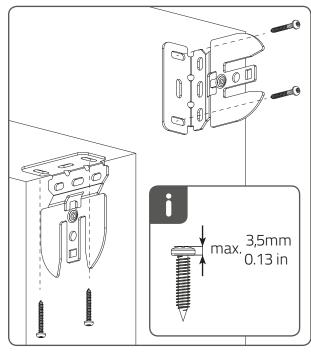


ABSOLUTE ROLLER BLIND 2.0 1 INST\_RC-MA10\_RO\_GBO

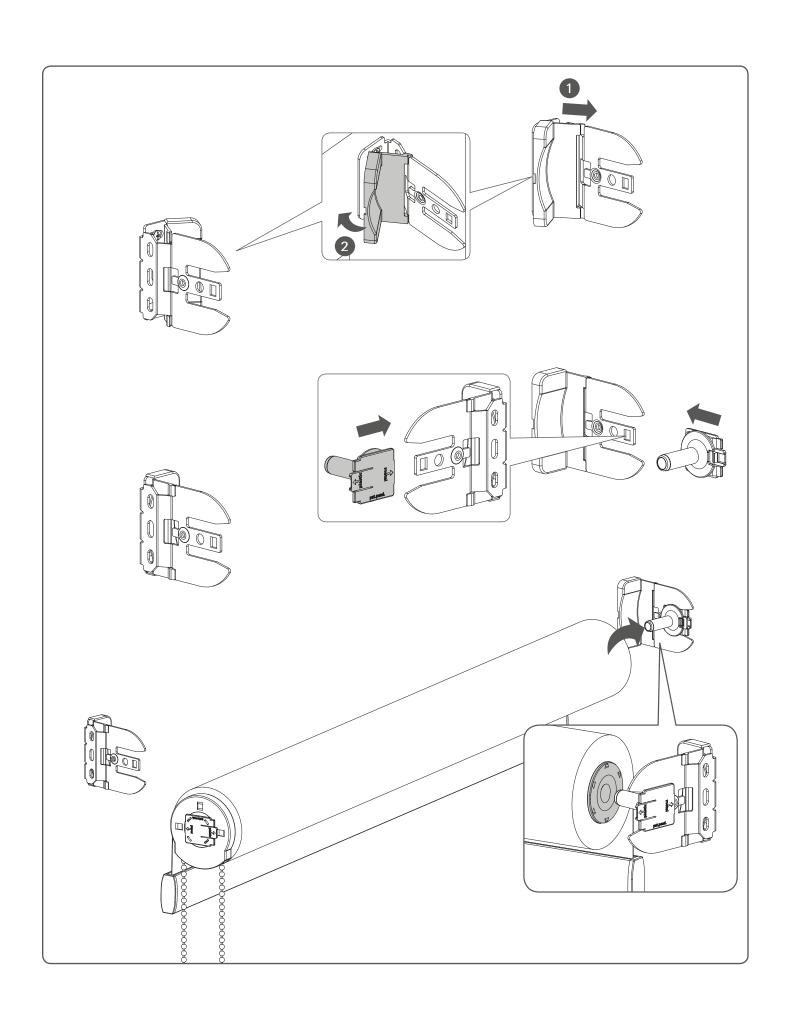

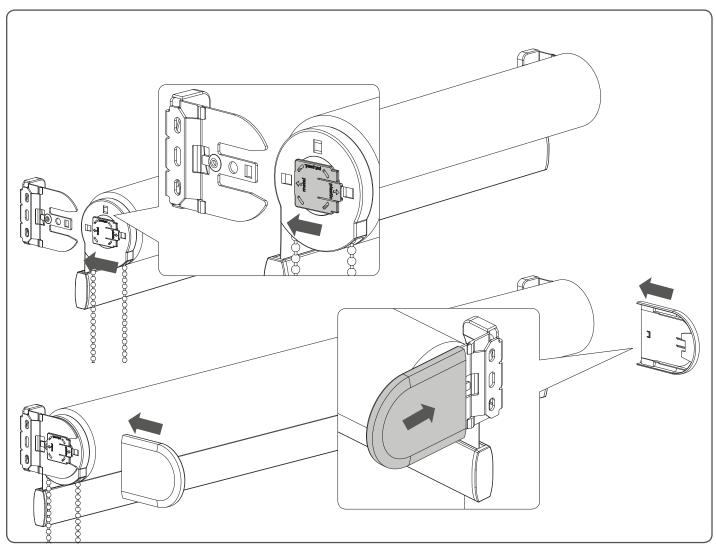

# Install the child safety device as specified in the childsafe manual.

# Removal

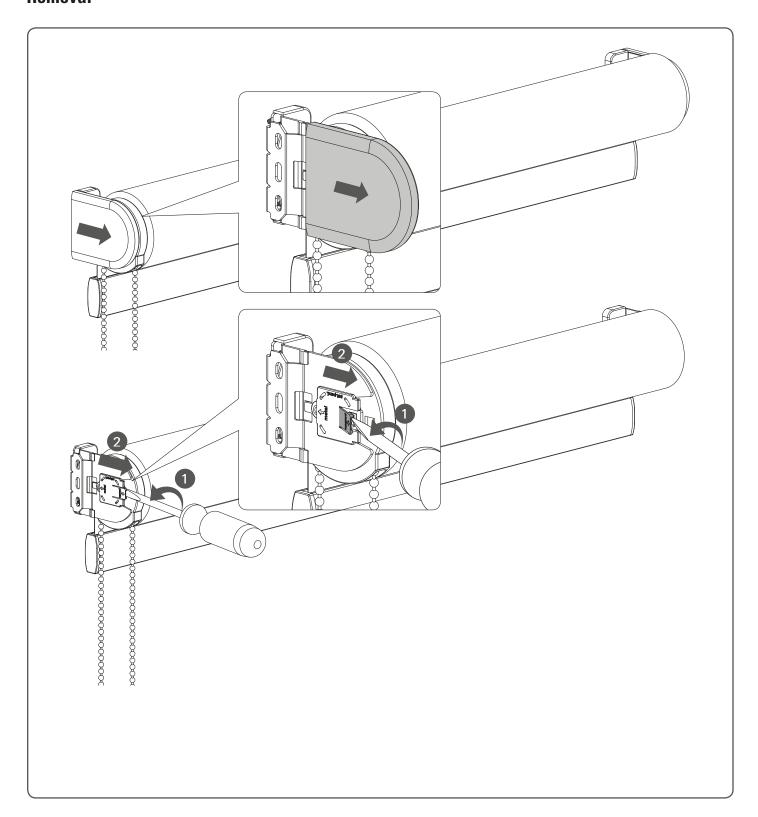


## **Installation - Fascia**


Read the instructions carefully before assembling and using the product. Assembling process can be completed by non-professionals. For indoor use only.


# **△ WARNING**

- Young children can strangle in the loop of pull cords, chains and tapes, and cords that operate window coverings.
- To avoid strangulation and entanglement, keep cords out of the reach of young children.
  Cords may become wrapped around a child's neck
- Move beds, cots and furniture away from window covering cords.
- Do not tie cords together.
- Make sure cords do not twist together and form a loop.



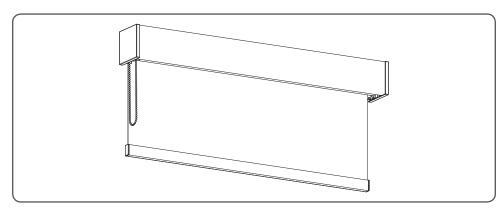

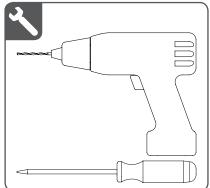

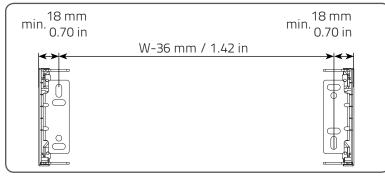

### Step One:


- Use the brackets to mark the screw locations
- On outside mount, make your marks so the distance from the outside edge of the bracket to the outside edge of the other bracket equals your ordered width

Note: Brackets must be level to each other for the shade to operate properly (for both inside mount and outside mount)


### Step Two:


- Recommend you pre-drill the screw holes using a 5/64" drill bit where you marked the screw locations
- Mount the brackets using 2 screws for each bracket

Note: On outside mount, the screws will be installed on an angle. This is normal and the screws may not be flat against the bracket.

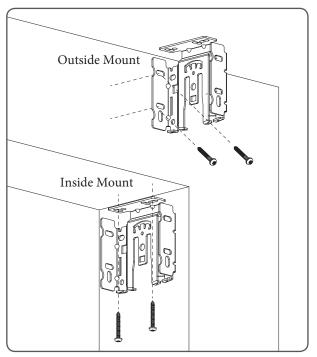

# Installation

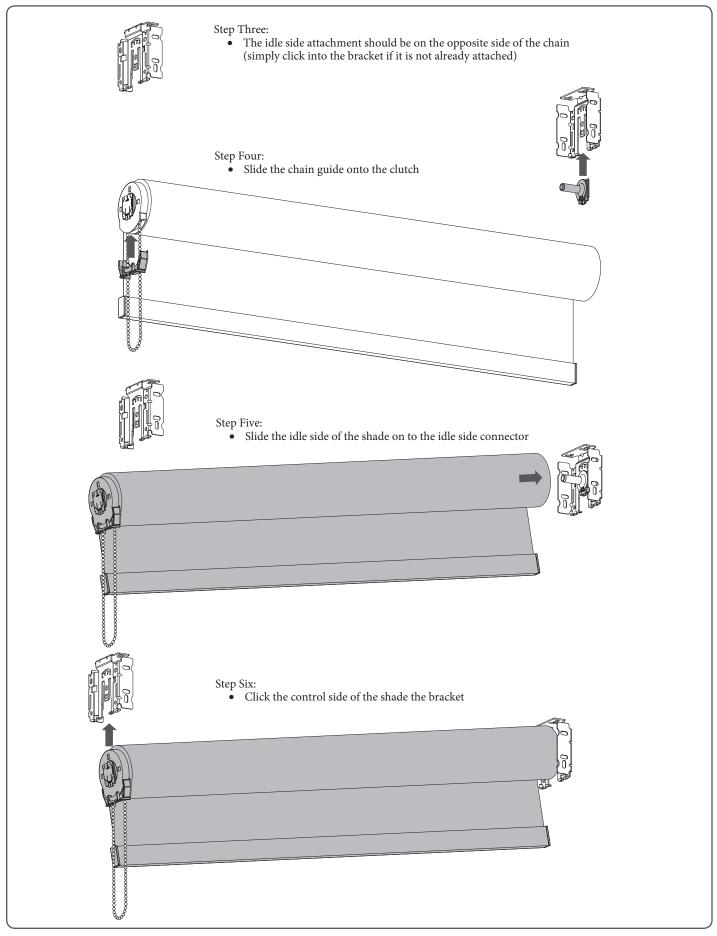

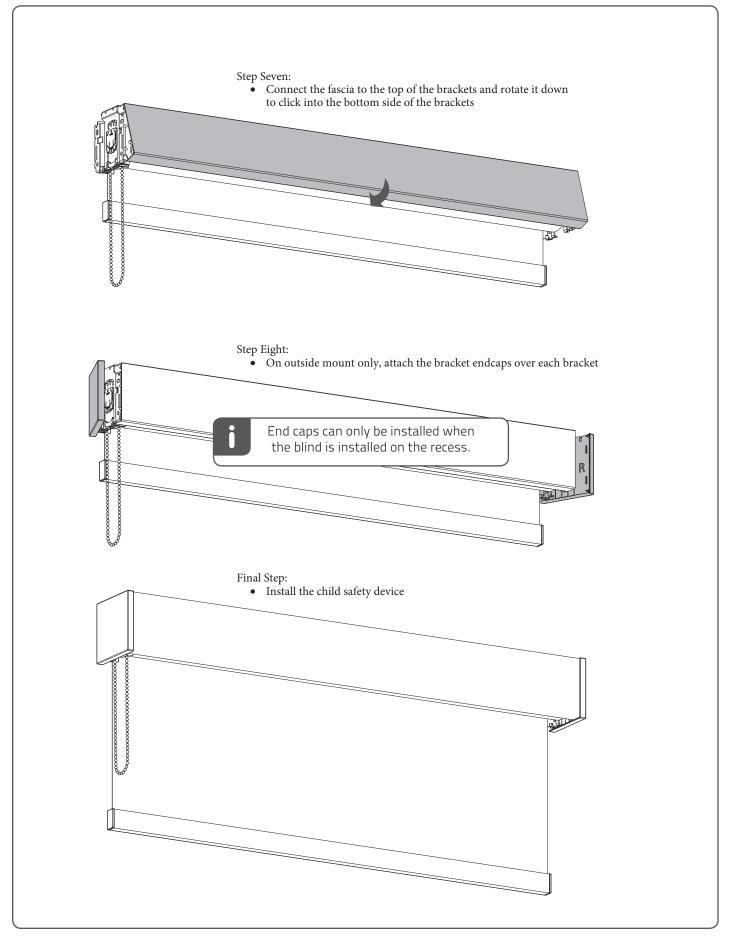

### **CORNICE INSTALLATION**

**INSIDE MOUNT** 


### NOTE:

Your cornice will have pre-drilled holes.

The brackets for your shade will come installed on the cornice (if the cornice and shade are ordered together).

Install cornice before installing the shade.

- 1. Hold the cornice to the top of your window frame and set it back until it is flush with your wall or until it is touching the back of the window opening. Be sure the cornice is centered in the opening.
- 2. Pre-drill holes for your screws through each pre-drilled hole in your cornice.
- 3. Secure your cornice to the window by screwing through each pre-drilled hole.
- 4. Once the cornice is mounted, you can then install the shade.

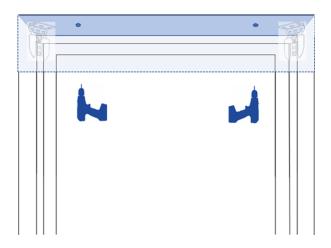

### **CORNICE INSTALLATION**


**OUTSIDE MOUNT** 

### NOTE:


The brackets for your shade will come installed on the cornice (if the cornice and shade are ordered together).


Install cornice before installing the shade.

- Make sure the surface you intend to install your cornice hardware is sturdy enough to support the brackets. You will need to screw into wood studs that are strong enough to securely bond with the included screws or you will need to use fasteners to securely support the brackets. Please note secure fasteners are not included.
- 2. Center the cornice over the window opening at your desired height. Mark the position of the ends of the cornice on the wall. Measure in 6" from each end and using the cornice bracket mark the screw holes with a pencil. If you have additional cornice brackets, space them evenly between the outer brackets. Make sure all the mounting brackets are level with one another.
- 3. Pre-drill the holes for each cornice bracket and then secure the brackets to your mounting surface.

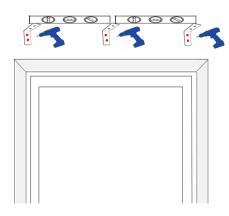


- 4. Place the cornice on top of the brackets and center it to the window. Check again that the cornice is level. Hold the cornice in place and screw through the top of each bracket into the cornice.
- 5. Once the cornice is secured to each bracket, then you can install the shade.

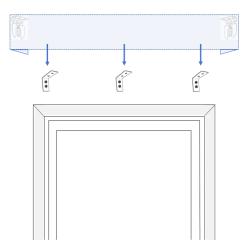

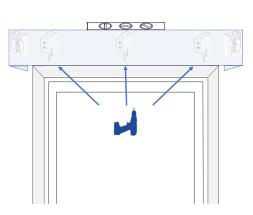

# SIDE TRACKS

- 1) Install the shade first
- 2) Place Side Track into the window opening to determine if any access needs to be trimmed off
- Side Tracks should fit from the windowsill up to the installed shade brackets
- Remove the tape and press the Side Track against the side of the window opening
- 5) Recommend having the shade operate in front of the Side Tracks

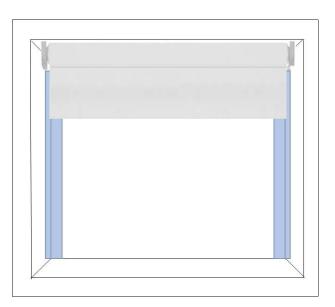

## **TOP VIEW**



Room Side