


Subtle Day & Night Roman Shade

Install Guide - Cordless Lift


PARTS INCLUDED

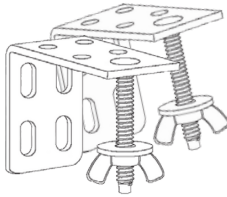

Brackets



Screws

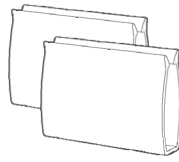

Handles

TOOLS NEEDED



Pencil




Tape Measure



Drill



5/64" Bit



Phillips Screwdriver



Phillips Bit



Level




Step Ladder




This is a Level 1 Install.

Installation

Note: These have predrilled holes in the top of the headrail. Use these holes as a guide for bracket placement.

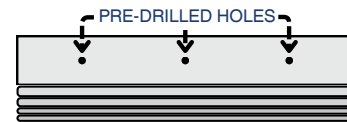

Inside Mount

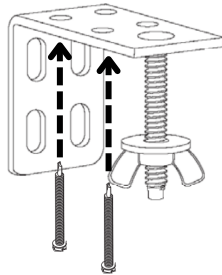

Hold the brackets up to the top of the window opening. Line the front up to make it flush with the wall. Hold the shade in place and make a mark through each hole in the headrail. Set the shade aside.


Take a bracket, and center the drop bolt over each mark. Mark the holes.

Align the brackets with the holes and use a Phillips drill bit and install the screws.


Outside Mount

Center and hold the headrail at least two inches above the window opening. While keeping the shade level, make a small line above each of the predrilled holes in the headrail. Set the shade aside.

Align the top edge of the bracket along each mark. Mark the screw placement through the bracket holes on the back. Predrill the holes and then install the bracket using the screws.

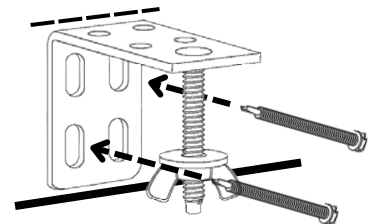

Attaching the Shade

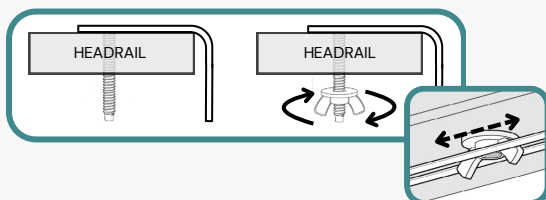


Remove the wingnuts. With the shade facing you, slide the shade onto the drop bolts of the brackets. Use your other hand to screw each wingnut securely. Make sure the wings of the bracket are parallel to the strings to avoid operation issues.

Subtle Day & Night Roman Shade

Install Guide - Motorization


PARTS INCLUDED

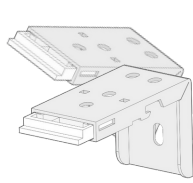

Brackets



Screws

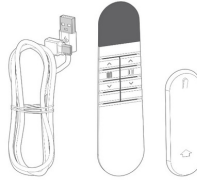

Charger and Remote

TOOLS NEEDED



Pencil




Tape Measure



Drill



5/64" Bit



Phillips Screwdriver



Step Ladder



Phillips Bit




Level



This is a Level 1 Install.

Installation

Inside Mount

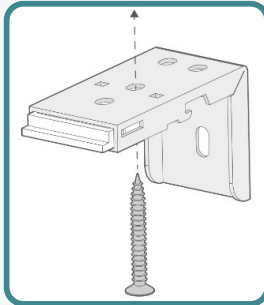

Hold the brackets up to the top of the window opening. Ensure the bracket is at least 2" from the edges of the window opening.

Make a mark through the top screw holes and then predrill using a 5/64" drill bit.


Evenly space additional brackets if needed. Secure the bracket with the provided screws.

Outside Mount



Hold the brackets up to the wall just above the window opening. Ensure the bracket is at least 1 1/2" from the edge of the window opening.

Make a mark through the back screw holes and then predrill using a 5/64" drill bit.

Evenly space additional brackets if needed. Secure the bracket with the provided screws.

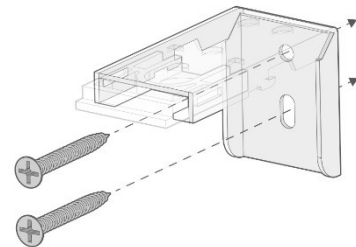

Attaching the Shade

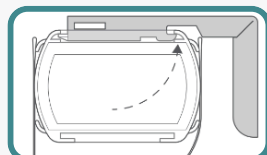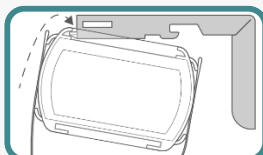


Hook the front lip of the shade's headrail on the front of the bracket. Push the shade back. Rotate the back of the headrail up and it will clip in place.

Subtle Day & Night Roman Shade

Motorization Programming


Note: Make sure the shade is fully charged before pairing the remote.

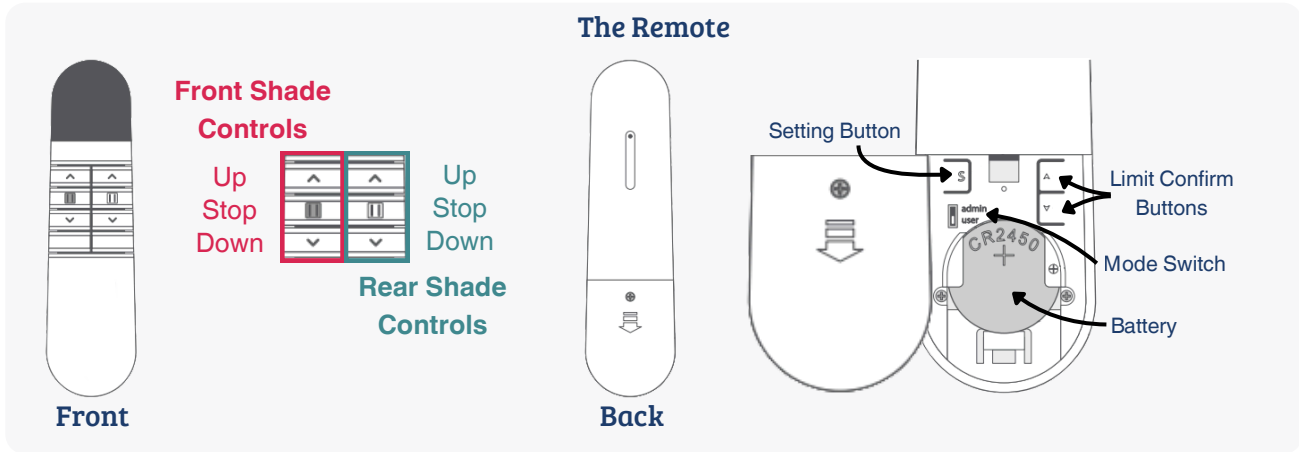

Setting the Limits with the Remote

The shades arrive with the remote already paired and preset, but if you would like to change the limits, follow these steps.

Remove the compartment on the back and switch the mode from “user” to “admin”. When the steps below are done, switch back to “user”.

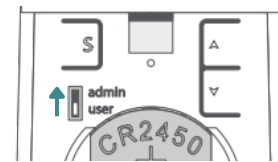

Upper Limit



Press the up button and raise the shade to the desired position and press stop.

On the back of the remote, press and hold the Up Arrow Button until the shade jogs confirmation. This limit is now set.

Lower Limit



Press the down button and lower the shade to the desired position and press stop.

On the back of the remote, press and hold the Down Arrow Button until the shade jogs confirmation. This limit is now set.

Deleting or Pairing a Remote

Deleting

Press the “setting” or S button 5 times quickly to remove the remote. The shade will jog confirmation.

Pairing

Press and hold the Setting button on the motor until you see a jog. While in “admin” mode press and hold the “setting” or S button on the remote until the shade jogs again to confirm pairing.

