




Bespoke Panel Track

Install Guide

TOOLS NEEDED

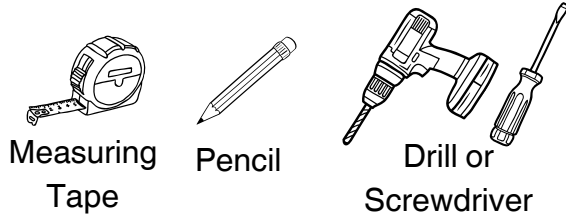

PARTS INCLUDED

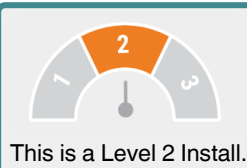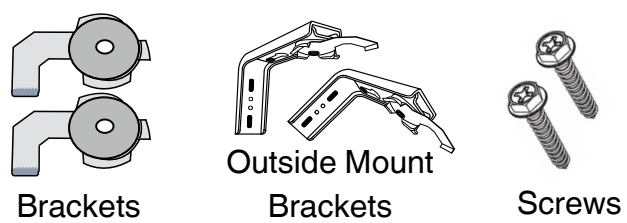


OPTIONAL




Installation

Inside Mount


Measure 4" out from the inside edge of the window frame on each side. If you have more than 2 brackets, evenly space out the other brackets.

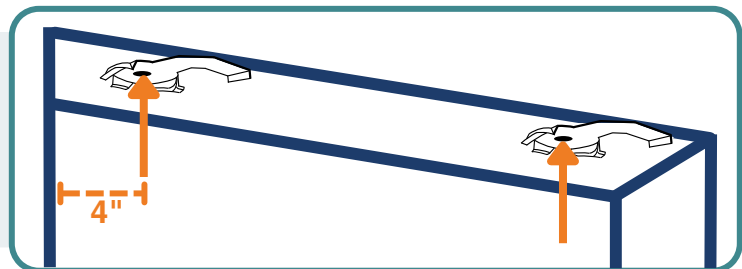

After mounting the brackets, slide the track onto the brackets with the lever facing outward toward the window opening.

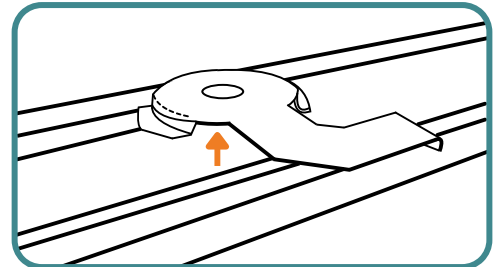

While holding the track in place, swing each bracket 90 degrees to the left and lock the track onto the bracket.

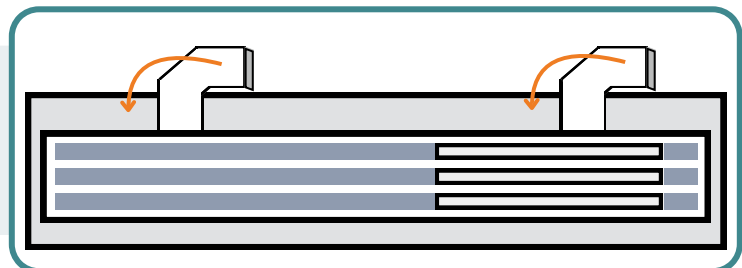


Skip to the bottom of the next page for the next steps. Outside Mount install will be on the next page as well.

Bespoke Panel Track


Install Guide

Outside Mount


Measure 4" out from the inside edge of the window frame on each side. If you have more than 2 brackets, evenly space out the other brackets.

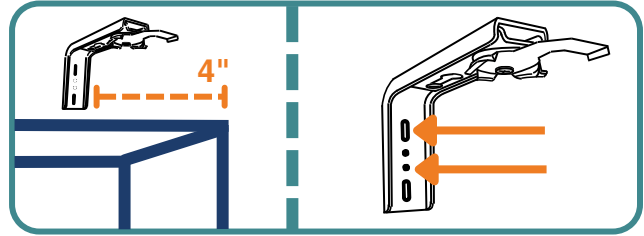


After mounting the brackets, slide the track onto the brackets with the lever facing outward toward the window opening.

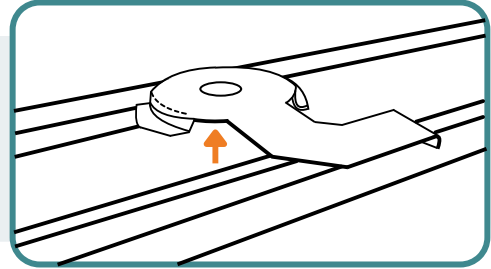

While holding the track in place, swing each bracket 90 degrees to the left and lock the track onto the bracket.

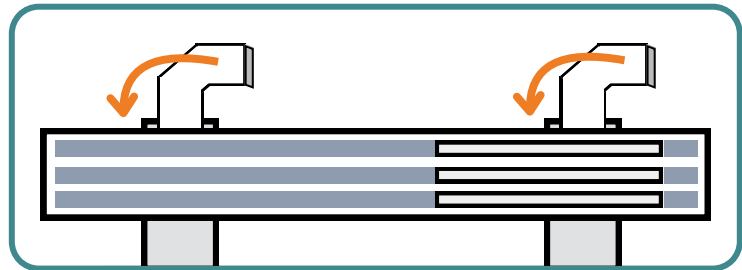


Attaching the Fabric and Wand

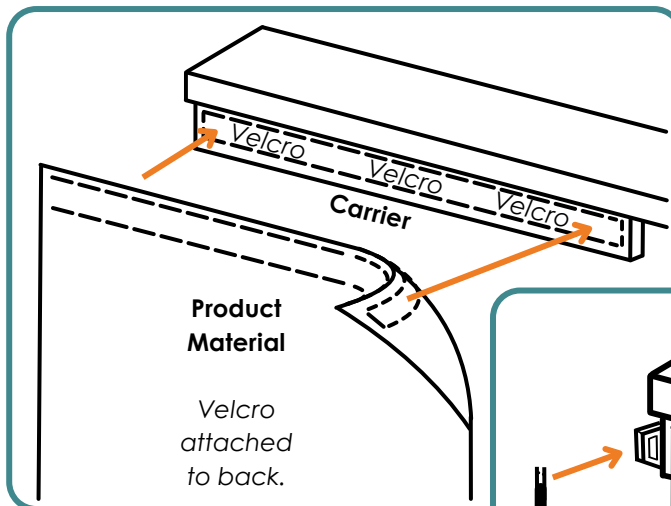

Unroll the panel fabric and attach the velcro on the back to the velcro band that is on the carrier.

Attach the wand and test out the operation.

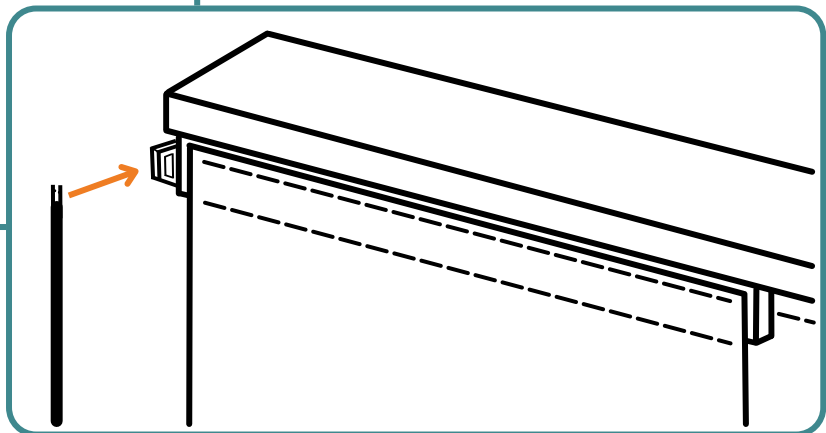

Congratulations! You just finished installing your Bespoke Panel Track.

Cleaning instructions: Spot clean by dabbing the with a damp wash rag and mild detergent.