




Refined Fabric Vertical Blinds

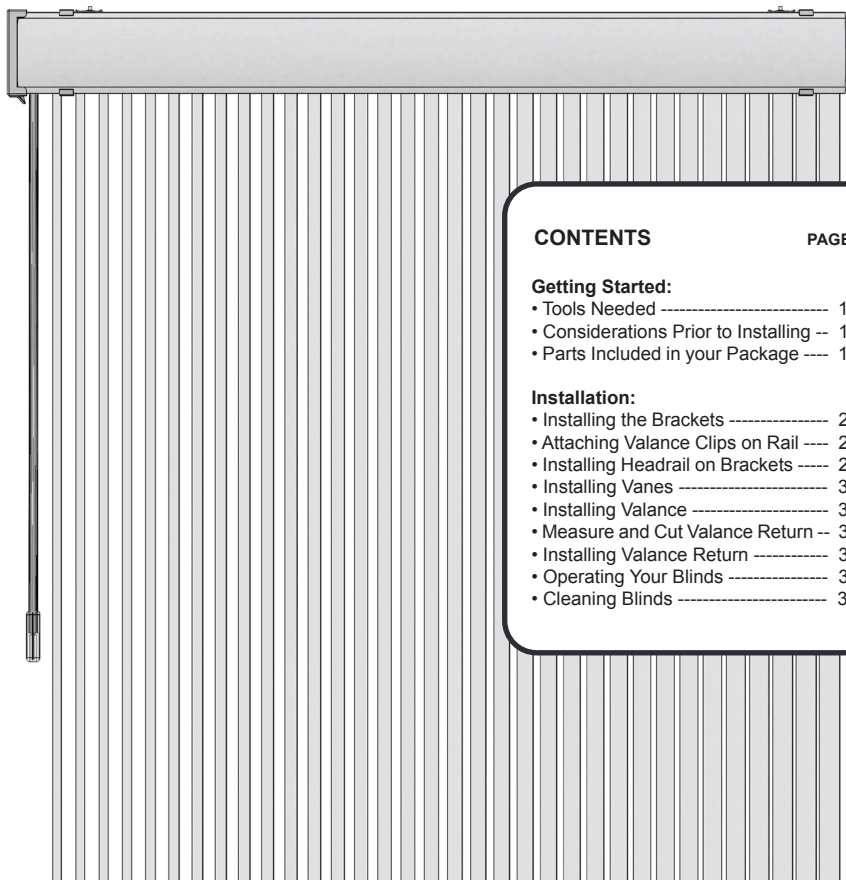

CONTENTS

PAGE

Getting Started:

- Tools Needed ----- 1
- Considerations Prior to Installing -- 1
- Parts Included in your Package ---- 1

Installation:

- Installing the Brackets ----- 2
- Attaching Valance Clips on Rail ---- 2
- Installing Headrail on Brackets ----- 2
- Installing Vanes ----- 3
- Installing Valance ----- 3
- Measure and Cut Valance Return -- 3
- Installing Valance Return ----- 3
- Operating Your Blinds ----- 3
- Cleaning Blinds ----- 3


Thank you for choosing our Refined Fabric Vertical Blinds for your Residential or Commercial space.

In this guide, you will find useful information about installation, child safety, cleaning, and warranty when using your blind.

READ ALL INSTALLATION INSTRUCTIONS BEFORE INSTALLING

PLEASE KEEP FOR FUTURE REFERENCE / TROUBLESHOOTING

SUGGESTED TOOLS (not included)

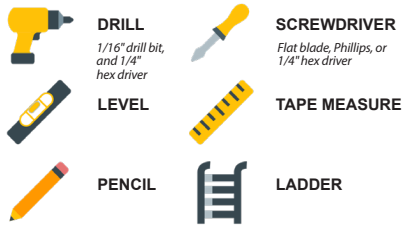


**THINGS TO CONSIDER BEFORE YOU
BEGIN YOUR INSTALLATION**

Your new blind is custom made to your specifications from the finest fabrics available. The installation should be easy and your blind will look elegant.

MOUNTING OPTIONS:


Inside mount (IB):

The Blind is mounted inside to the top of the window frame.

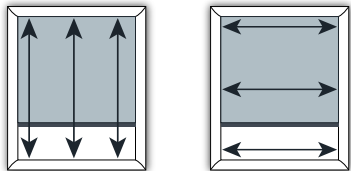

Outside mount (OB):

The Blind is mounted either on or outside the window frame.

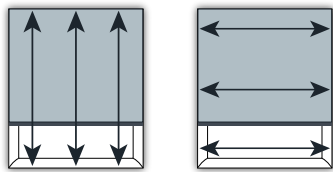

Mounting NOTES:

Mounting screws provided are suitable for most mounting surfaces. See below for additional suggestions.

- For wallboard or plaster: Use hollow wall anchors for added support. (not included)
- For concrete, stone, brick or tile: Use an appropriate drill and appropriate anchors before fastening the screws. (not included)
- For metal surfaces: Pre-drill holes and use appropriate anchors before fastening the screws. (not included)

INCLUDED IN YOUR PACKAGE

Standard Vertical Fabric Blind



Mounting L Bracket



Ceiling Clip




Valance Clip




Screw & Nut

Use to connect Ceiling Clip to Mounting L Bracket




Mounting Screw




Standard Rounded

Valance




Valance Connector

if outside mount

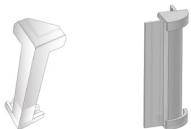

Valance Return

if outside mount

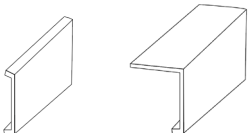


1


ILLUSTRATION

PLACEMENT AND INSTALLING BRACKETS

Inside mount: Mount ceiling brackets with a minimum of 2" from the back edge of the window sill.

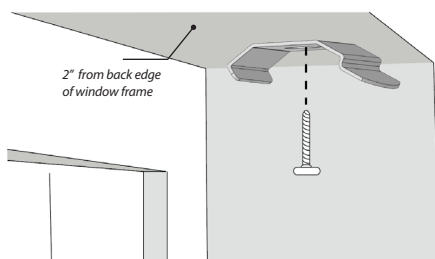


Outside Mount: Use wall anchors for a secure hold. Mark the position of the L bracket as illustrated. You will need min 2" space to secure brackets.

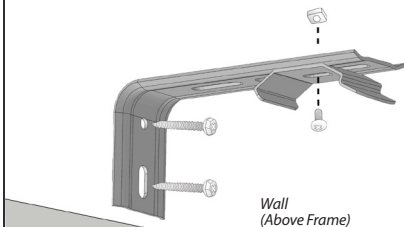

2

ILLUSTRATION

ATTACH VALANCE CLIPS ON RAIL


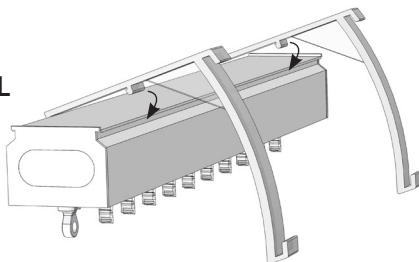


3

ILLUSTRATION

INSTALL HEADRAIL ON BRACKETS

- Insert headrail at an angle facing the window.
- Hook in back of bracket first and then push upward to snap it into the front of bracket.

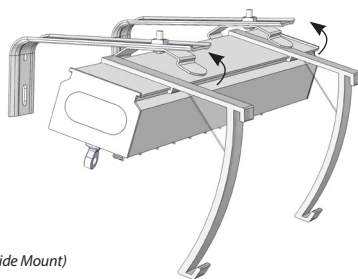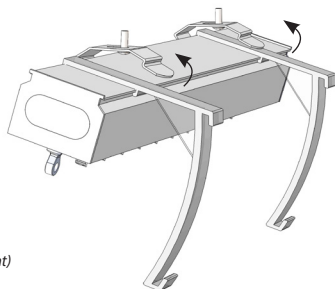


4

ILLUSTRATION

INSTALL VANES ON HEADRAIL


Insert vanes in open position.

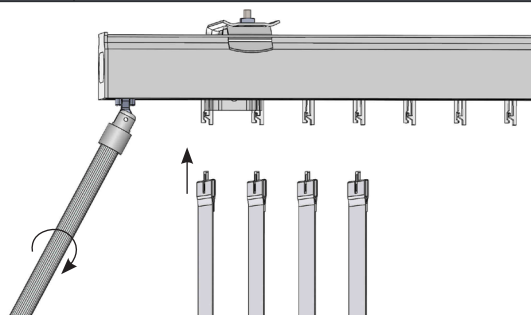

5

ILLUSTRATION

INSTALL VALANCE ON CLIPS ON HEADRAIL

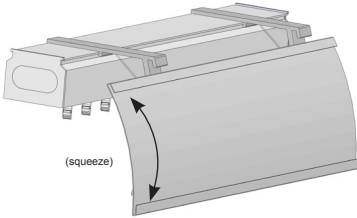


6

ILLUSTRATION

MEASURE AND CUT VALANCE RETURN

(FOR OUTSIDE MOUNT ONLY)

- Measuring:**
1. Measure edge of wall to valance.
 2. Mark it.
 3. Cut using scissors.

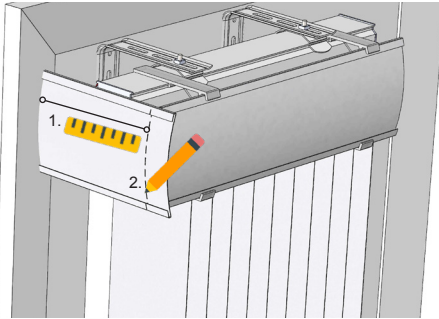


7



ILLUSTRATION

INSTALL VALANCE RETURN

(FOR OUTSIDE MOUNT ONLY)

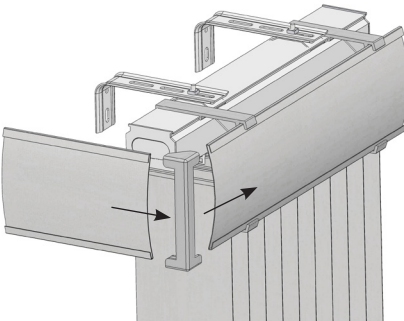

OPERATING YOUR VERTICAL BLINDS

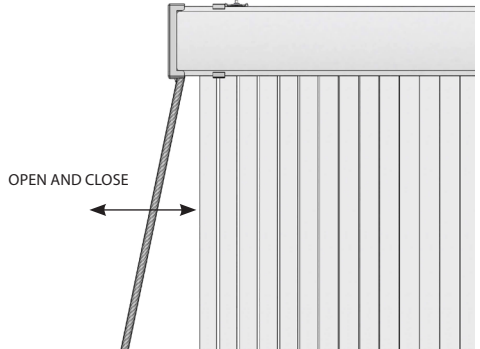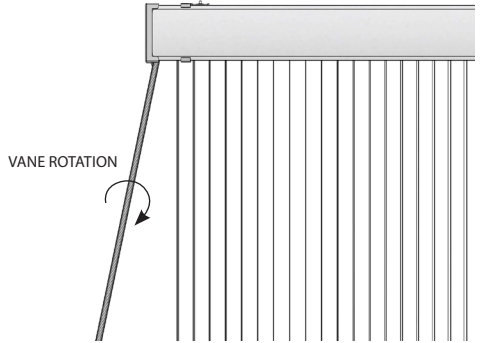

CLEANING YOUR BLIND:

Lightly wipe with a damp cloth or dust for regular maintenance.

NOTE:

The Warning labels on the bottom-rails of corded window coverings contain important safety information. These warning labels are designed to be permanent, in accordance with the industry's safety standards, and must not be removed.