**CONTENTS****PAGE****Getting Started:**

- Tools Needed ----- 1
- Considerations Prior to Installing -- 1
- Parts Included in your Package ---- 1

**Installation:**

- Installing the Brackets ----- 2
- Attaching Valance Clips on Rail ---- 2
- Installing Headrail on Brackets ----- 2
- Installing Vanes ----- 3
- Installing Valance ----- 3
- Measure and Cut Valance Return -- 3
- Installing Valance Return ----- 3
- Operating Your Blinds ----- 3
- Cleaning Blinds ----- 3


**Thank you for choosing our Refined Fabric Vertical Blinds for your Residential or Commercial space.**

In this guide, you will find useful information about installation, child safety, cleaning, and warranty when using your blind.

**READ ALL INSTALLATION INSTRUCTIONS BEFORE INSTALLING**

**PLEASE KEEP FOR FUTURE REFERENCE / TROUBLESHOOTING**

**SUGGESTED TOOLS** (not included)

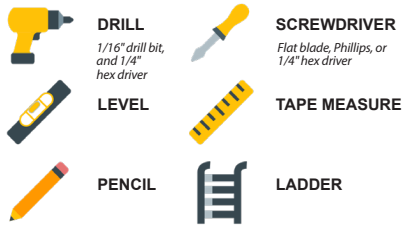


**THINGS TO CONSIDER BEFORE YOU  
BEGIN YOUR INSTALLATION**

Your new blind is custom made to your specifications from the finest fabrics available. The installation should be easy and your blind will look elegant.

**MOUNTING OPTIONS:**


**Inside mount (IB):**

The Blind is mounted inside to the top of the window frame.

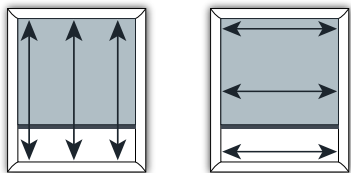

**Outside mount (OB):**

The Blind is mounted either on or outside the window frame.

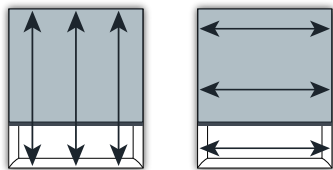

**Mounting NOTES:**

Mounting screws provided are suitable for most mounting surfaces. See below for additional suggestions.

- For wallboard or plaster: Use hollow wall anchors for added support. (not included)
- For concrete, stone, brick or tile: Use an appropriate drill and appropriate anchors before fastening the screws. (not included)
- For metal surfaces: Pre-drill holes and use appropriate anchors before fastening the screws. (not included)

**INCLUDED IN YOUR PACKAGE**

**Standard Vertical Fabric Blind**



**Mounting L Bracket**



**Ceiling Clip**




**Valance Clip**




**Screw & Nut**

Use to connect Ceiling Clip to Mounting L Bracket




**Mounting Screw**




**Standard      Rounded**

**Valance**




**Valance Connector**

if outside mount

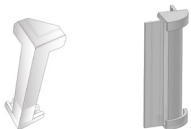

**Valance Return**

if outside mount

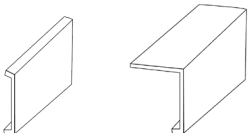


1


ILLUSTRATION

## PLACEMENT AND INSTALLING BRACKETS

**Inside mount:** Mount ceiling brackets with a minimum of 2" from the back edge of the window sill.

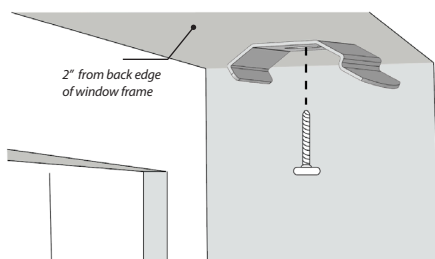


**Outside Mount:** Use wall anchors for a secure hold. Mark the position of the L bracket as illustrated. You will need min 2" space to secure brackets.

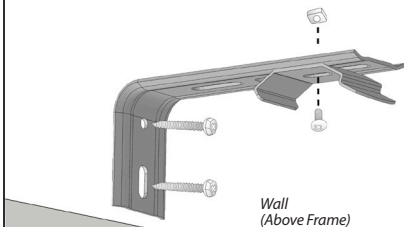

2

ILLUSTRATION

## ATTACH VALANCE CLIPS ON RAIL

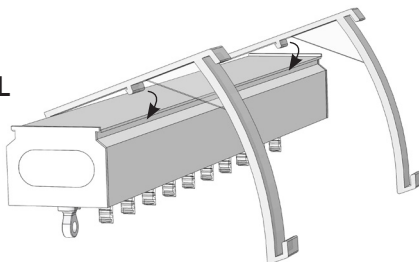


3


ILLUSTRATION

## INSTALL HEADRAIL ON BRACKETS

- Insert headrail at an angle facing the window.
- Hook in back of bracket first and then push upward to snap it into the front of bracket.

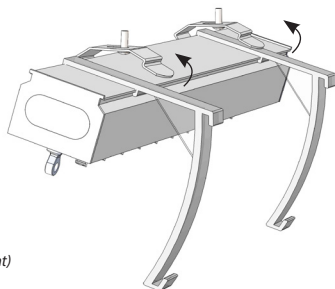

(Inside Mount)

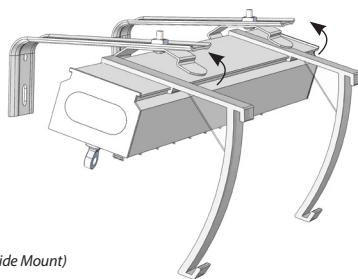


(Outside Mount)

4

ILLUSTRATION

## INSTALL VANES ON HEADRAIL


Insert vanes in open position.

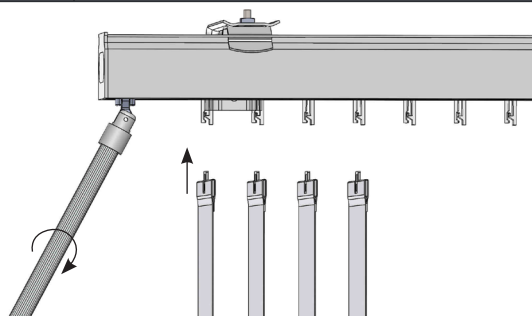

5

ILLUSTRATION

## INSTALL VALANCE ON CLIPS ON HEADRAIL

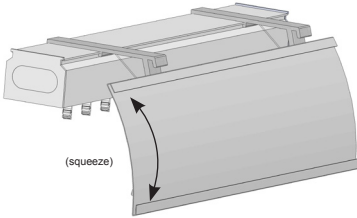


6

ILLUSTRATION

## MEASURE AND CUT VALANCE RETURN

(FOR OUTSIDE MOUNT ONLY)

- Measuring:**
1. Measure edge of wall to valance.
  2. Mark it.
  3. Cut using scissors.

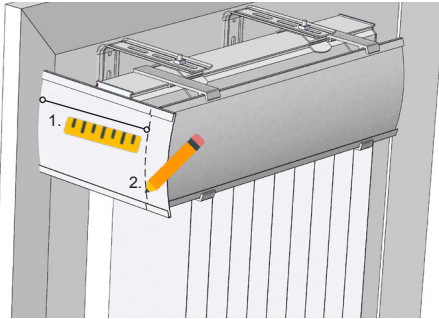


7



ILLUSTRATION

## INSTALL VALANCE RETURN

(FOR OUTSIDE MOUNT ONLY)

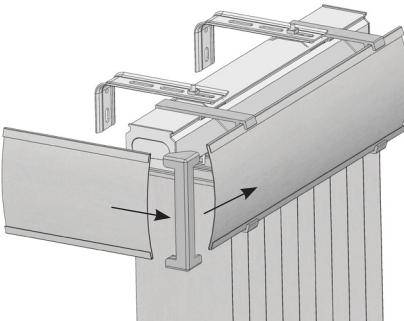

## OPERATING YOUR VERTICAL BLINDS

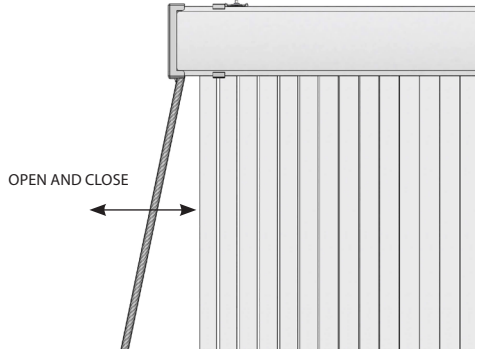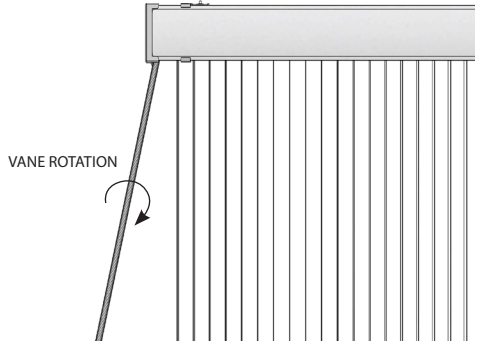

## CLEANING YOUR BLIND:

Lightly wipe with a damp cloth or dust for regular maintenance.

## NOTE:

The Warning labels on the bottom-rails of corded window coverings contain important safety information. These warning labels are designed to be permanent, in accordance with the industry's safety standards, and must not be removed.